




## Spare Parts for RL-2

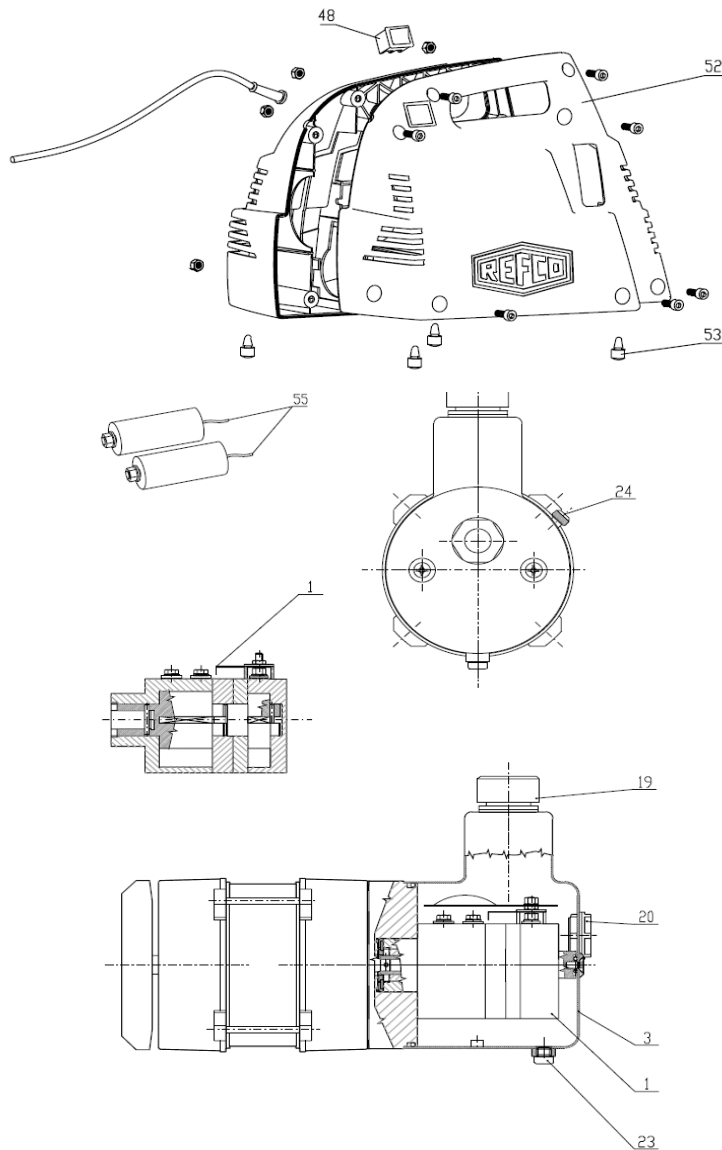

Pos.	Designation		Part No.
3	RL-2-3000	Oil basin complete with gasket	4661589
20	RL-2-3011	Oil sight glass with gasket + Counter nut	4661597
19	RL-2/4-303	Oil mist filter with gasket	4495471
24	RL-2/4-3060	Gasballast valve complete	4661423
53	RL-2/4-4071	Rubber pad set (4 pieces)	4675598
55	RL-2-406	Capacitor (1 piece)	4661075
48	RL-2/4/8-415	Switch	4496770
52	RL-2-4000	Housing complete	4661538
1	RL-2-2A	Vacuum stage overhauled complete with gasket in exchange	4661482
1	RL-2-2A	Vacuum stage overhauled complete with gasket without exchange	4661482
	RL-2-1000	Gasket set	4668419



## Spare Parts for RL-4

	<b>Designation</b>		<b>Part No.</b>
3	RL-4-3000	Oil basin complete with gasket	4507674
20	RL-4-3011	Oil sight glass with gasket + Counter nut	4507682
23	RL-4/8-310	Oil drain plug with gasket	4496761
19	RL-2/4-303	Oil mist filter with gasket	4495471
24	RL-2/4-3060	Gasballast valve complete	4661423
53	RL-2/4-4071	Rubber pad set (4 pieces)	4675598
55	RL-4-406	Capacitor (1 piece)	4661066
48	RL-2/4/8-415	Switch	4496770
52	RL-4-4000	Housing complete	4661474
1	RL-4-2A	Vacuum stage overhauled complete with gasket in exchange	4661954
1	RL-4-2A	Vacuum stage overhauled complete with gasket without exchange	4661954
	RL-4-1000	Gasket set	4668427

## Spare Parts for RL-8

	<b>Designation</b>		<b>Part No.</b>
3	RL-8-3000	Oil basin complete with gasket	4507607
20	RL-8-3011	Oil sight glass with gasket + Counter nut	4507615
23	RL-4/8-310	Oil drain plug with gasket	4496761
19	RL-8-303	Oil mist filter with gasket	4507445
24	RL-8-3060	Gasballast valve complete	4507623
53	RL-8-4071	Rubber pad set (4 pieces)	4507631
55	RL-8-426	Capacitor set	4507470
48	RL-2/4/8-415	Switch	4496770
52	RL-8-4000	Housing complete	4507640
1	RL-8-2A	Vacuum stage overhauled complete with gasket in exchange	4507658
1	RL-8-2A	Vacuum stage overhauled complete with gasket without exchange	4507658
	RL-8-1000	Gasket set	4668436